



INSTALLATION GUIDE

Architectural wood slat panel for walls, ceilings & furniture

IMPORTANT : It is recommended that the product be stored flat in an area where the ambient temperature is between 65°F and 86°F (10°C and 30°C) and the relative humidity between 25% RH and 55% RH. For the installation of the product, it is recommended to use the following tools (not included): construction adhesive cartridge, a table saw and/or a miter saw and/or a circular saw, a level, a pneumatic nail gun, finishing nails (18 or 23 gauge). Upon receipt of the product, and especially before its installation, please check that the product conforms to the order and notify WoodzCo within seven (7) days of receipt of any defect/damage to the product. For details, refer to the WoodzCo [Limited Warranty](#) on our website www.woodzco.com. It is recommended that the installation work be entrusted to a worker with the necessary skills to ensure proper installation that complies with the recommendations.


PLEASE read all instructions of the installation guide before starting your work. This installation requires a detailed installation plan, careful planning and precise measurements.

NOTE : For indoor use only. A rigid surface (eg. plywood, MDF, particles, gypsum, etc.) is necessary on the entire surface to be covered to ensure the stability of the product. Beforehand, make sure that the wall, ceiling or furniture has been properly prepared to receive STRATA panels.


1. Installation plan

Before starting the panel's installation, it is important to establish your installation plan. Determine the orientation of the panels and measure the dimensions of the surface to be covered to calculate the alignment and positioning of the panels.

NOTE: For a ceiling higher than 95 in, it is recommended to make a staggered installation.

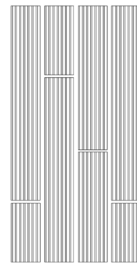


Staggered installation

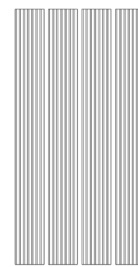

Side-by-side installation

2. Fixing

On the back of the panel, apply construction adhesive in an "S"-shaped bead. Place the panel on the surface to be covered in the right location and leveled according to your installation plan. Holding it in place, secure it with finishing nails (18 or 23 gauge). To ensure stability, each panel must be fastened with eight (8) finishing nails, evenly spaced.



3. Conclusion

Join the next panel and thus continue the panel's installation in order to cover the entire surface of your project.

CUTTING PROCEDURE

NOTE: In accordance with the manufacturer's recommendations, it is possible to cut a panel so that it is custom-made for your project.

1. With a pencil, make a cut line at the desired location on the panel.
2. Using a saw, cut the panel along the cut line, with the face of the panel down. Proceed carefully to ensure a clean cut without damaging the panel.

NOTE: It is possible to perforate the STRATA panels in order to integrate a light or any other electrical element (socket, switch, recessed light, etc.) with an oscillating tool or a hole saw. Proceed carefully to ensure a clean cut without damaging the panel.

For **cleaning and maintenance** recommendations, refer to the CARE GUIDE on our website www.woodzco.com.